TEAC

9A07124500

A-H500i

INTEGRATED STEREO AMPLIFIER

Thanks for buying a TEAC. Read this manual carefully to get the best performance from this unit.

Nous vous remercions pour l'achat d'un appareil TEAC.
Lire ce manuel avec attention pour obtenir les meilleures performances possibles de cet appareil.

Vielen Dank für den Kauf dieses TEAC-Geräts.
Bitte lesen Sie diese Anleitung sorgfältig durch, um die Leistungsfähigkeit dieses Geräts optimal nutzen zu können.

Grazie per aver acquistato un prodotto TEAC.
Leggere attentamente questo manuale per ottenere le migliori prestazioni da questo apparecchio.

Enhorabuena por la adquisición de un TEAC.
Lea detenidamente este manual a fin de obtener el mejor rendimiento de esta unidad.

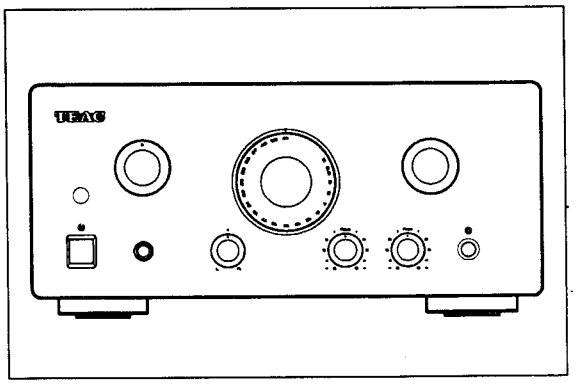

OWNER'S MANUAL 3
MANUEL DU PROPRIETAIRE 11
BEDIENUNGSANLEITUNG 19
MANUALE DI ISTRUZIONI 27
MANUAL DEL USUARIO 35

ENGLISH
FRANÇAIS
DEUTSCH
ITALIANO
ESPAÑOL

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol, within equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

This appliance has a serial number located on the rear panel. Please record the model number and serial number and retain them for your records.
Model number _____
Serial number _____

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

Important Safety Instructions

CAUTION:
- **Read all of these Instructions.**
- **Save these Instructions for later use.**
- **Follow all Warnings and Instructions marked on the audio equipment.**

1) Read Instructions — All the safety and operating instructions should be read before the product is operated.
2) Retain Instructions — The safety and operating instructions should be retained for future reference.
3) Heed Warnings — All warnings on the product and in the operating instructions should be adhered to.
4) Follow Instructions — All operating and use instructions should be followed.
5) Cleaning — Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
6) Attachments — Do not use attachments not recommended by the product manufacturer as they may cause hazards.
7) Water and Moisture — Do not use this product near water – for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.
8) Accessories — Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.
9) A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.

10) Ventilation — Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
11) Power Sources — This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
12) Grounding or Polarization — This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
13) Power-Cord Protection — Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.
14) Outdoor Antenna Grounding — If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

"Note to CATV system installer:
This reminder is provided to call the CATV system installer's attention to Section 820-40 of the NEC which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Example of Antenna Grounding as per
National Electrical Code, ANSI/NFPA 70

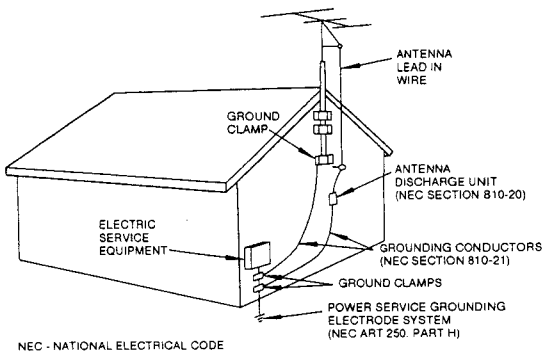
ANTENNA LEAD IN WIRE
GROUND CLAMP
ANTENNA DISCHARGE UNIT (NEC SECTION 810-20)
ELECTRIC SERVICE EQUIPMENT
GROUNDING CONDUCTORS (NEC SECTION 810-21)
GROUND CLAMPS
POWER SERVICE GROUNDING ELECTRODE SYSTEM (NEC ART 250. PART H)
NEC - NATIONAL ELECTRICAL CODE

15) Lightning — For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
16) Power Lines — An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
17) Overloading — Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in risk of fire or electric shock.
18) Object and Liquid Entry — Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
19) Servicing — Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
20) Damage Requiring Service — Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
a) when the power-supply cord or plug is damaged.
b) if liquid has been spilled, or objects have fallen into the product.
c) if the product has been exposed to rain or water.
d) if the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
e) if the product has been dropped or damaged in any way.
f) when the product exhibits a distinct change in performance – this indicates a need for service.
21) Replacement Parts — When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
22) Safety Check — Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
23) Wall or Ceiling Mounting — The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
24) Heat — The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

Before Use

Table of Contents

Connection 4
Rear Panel Overview 5
Speaker Connection 5
Front Panel Controls and Their Functions 6
Basic Operation 7
Recording 7
Remote Control Operation 8
AI Direct Play Function 9
Specifications 9
Troubleshooting 10

Read This Before Operating

- Place the amplifier on a hard flat surface.
- The ventilation holes should not be covered. Make sure there is at least 20 cm (8 inches) of space above and at least 5 cm (2 inches) of space besides the amplefier. Do not place CD player or other equipment on top of the amplifier.
- Avoid placing it in direct sunlight or close to a source of heat. Also avoid locations subject to vibrations and excessive dust, heat, cold or moisture.
- Do not open the cabinet, as this might result in circuitry damage or electrical shock.
- Do not attempt to clean the unit with chemical solvents as this might damage the finish. Use a clean, dry cloth.

IMPORTANT (for U.K. Customers)

DO NOT cut off the mains plug from this equipment. If the plug fitted is not suitable for the power points in your home or the cable is too short to reach a power point, then obtain an appropriate safety approved extension lead or consult your dealer.

If nonetheless the mains plug is cut off, remove the fuse and dispose of the plug immediately, to avoid a possible shock hazard by inadvertent connection to the mains supply.

If this product is not provided with a mains plug, or one has to be fitted, then follow the instructions given below:

IMPORTANT. DO NOT make any connection to the larger terminal which is marked with the letter E or by the safety earth symbo ⏚ or coloured GREEN or GREEN-and-YELLOW.

The wires in the mains lead on this product are coloured in accordance with the following code:

BLUE: NEUTRAL
BROWN: LIVE

As these colours may not correspond with the coloured markings identifying the terminals in your plug proceed as follows:

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured BLACK.

The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured RED.

When replacing the fuse only a correctly rated approved type should be used and be sure to re-fit the fuse cover.

IF IN DOUBT — CONSULT A COMPETENT ELECTRICIAN.

ENGLISH

Connection

- **Do not use this unit with it housed in a box or the like including an audio rack.**

To prevent damage to the speakers:

- Do not raise the volume level excessively.
- Turn off the amplifier when connecting or disconnecting.
- Do not touch the speaker's diaphragms.

Speaker placement

The playback characteristics of the speakers are greatly influenced by the placement and the room in which the speakers are used. To find the best location for the speakers play back some music without using the tone controls and move the speakers around. However, please keep the following in mind:

- Place the speakers on a flat, solid surface which is free from vibrations.
- Place the speakers in an area that is well ventilated. Do not place the speakers in a humid place.
- Keep the speakers away from direct sunlight and heat sources (stoves, etc.).
- Keep the speakers away from the turntable.

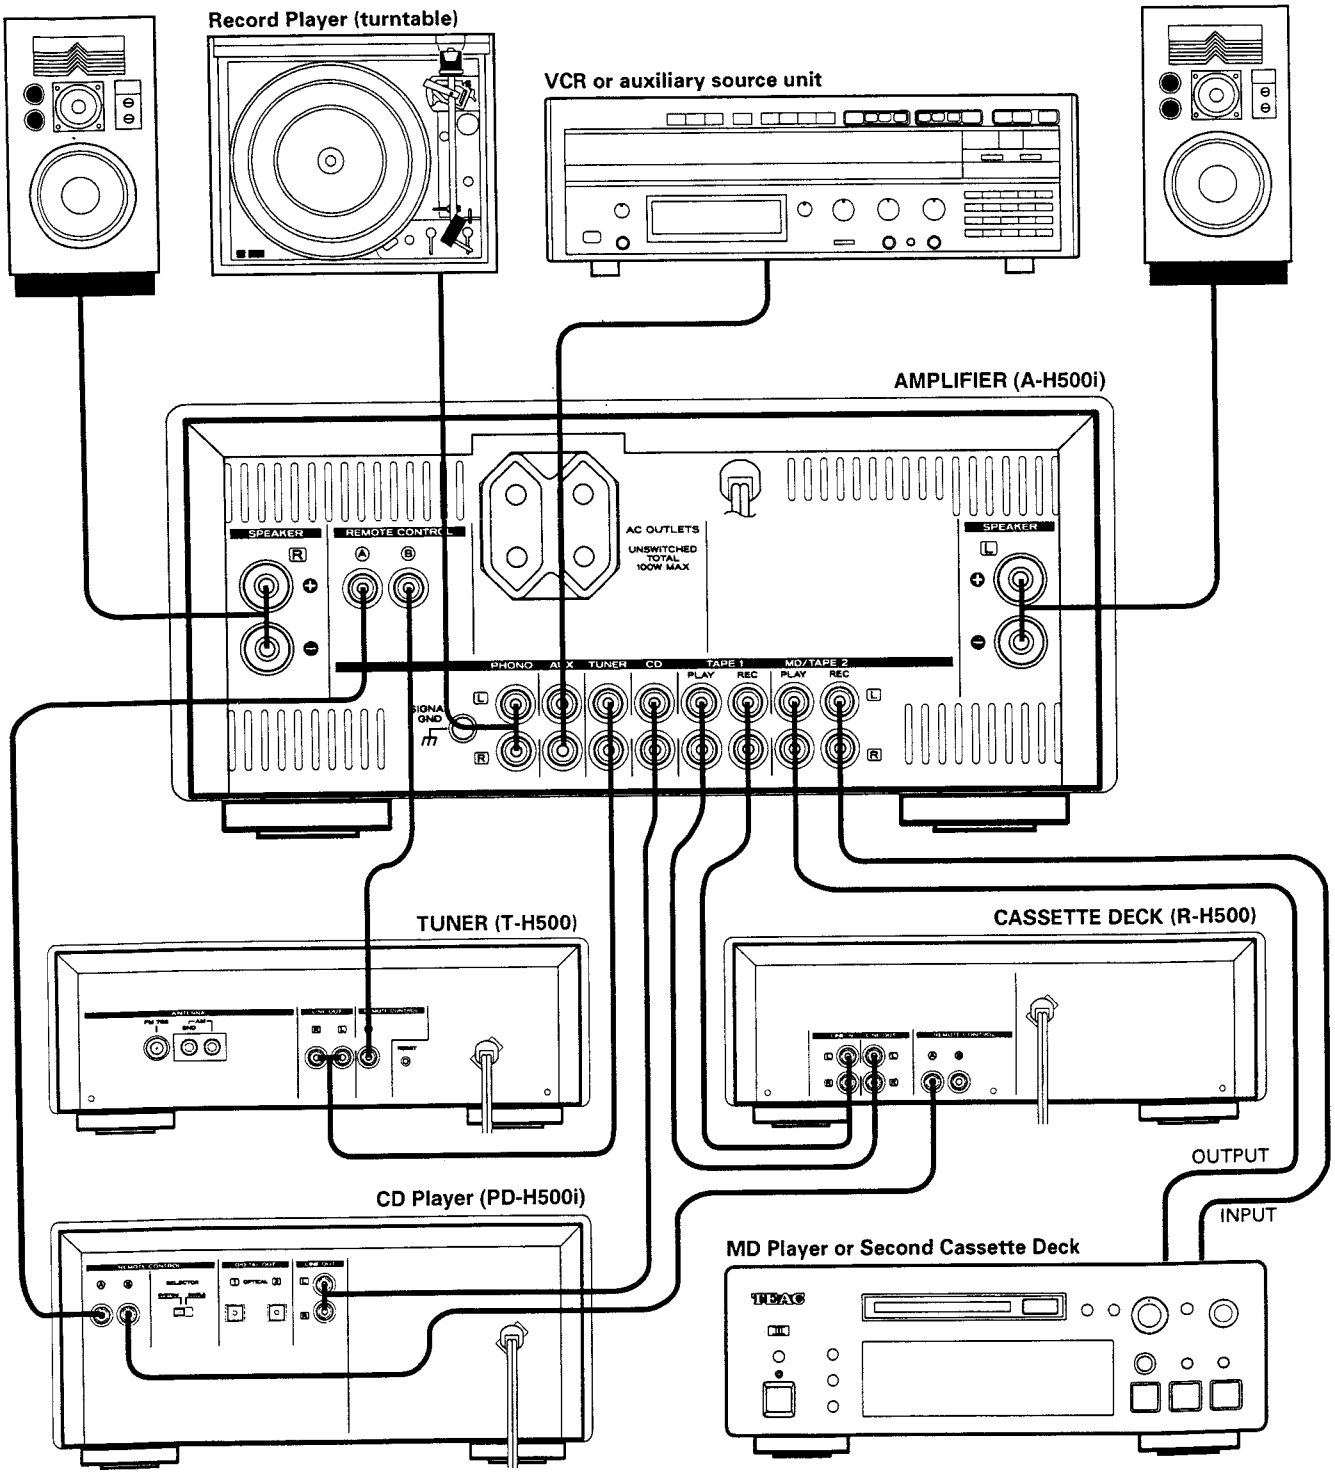

Rear Panel Overview

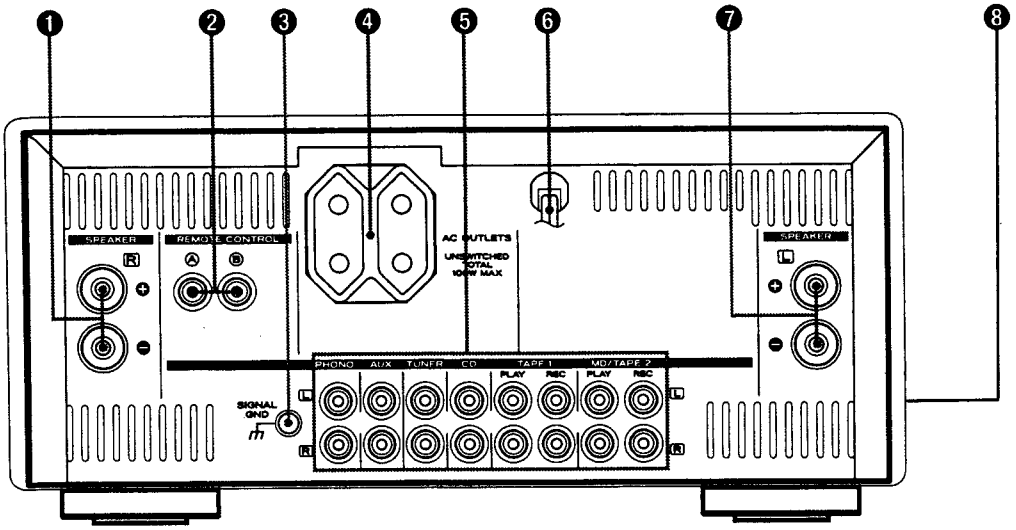

❶ Right speaker terminals

❷ Remote control jacks

These jacks are used for the connection of theTEAC Mini component system (T-H500, R-H500, PD-H500i) for the purpose of operating it using the Remote Control unit (RC-613 provided with the A-H500i amplifier) or system control signals.

❸ Signal ground terminal

Connect the ground lead of the record player (turntable) to this terminal.

❹ AC OUTLETS (unswitched)

Plug the AC power cord of the source unit (CD player, cassette deck, etc.) into this AC OUTLETS.

❺ Audio signal jacks:

- **MD/TAPE 2 PLAY/REC jacks**
  These jacks are used for the connection of the MD player or the second cassette deck.
  Connect the output (LINE OUT) jacks of the MD player or cassette deck to the PLAY jacks; the input (LINE IN) jacks of the MD player or cassette deck to the REC jacks.
- **TAPE 1 PLAY/REC jacks**
  Connec the output (LINE OUT) jacks of the cassette deck (R-H500) to the PLAY jacks; the input (LINE IN) jacks of the cassette deck to the REC jacks
- **CD input jacks**
  Connect the output (LINE OUT) jacks of the CD player (PD-H500i) to these jacks.
- **TUNER input jacks**
  Connect the output (LINE OUT) jacks of the tuner (T-H500) to these jacks.
- **AUX input jacks**
  Connec the output jacks of the VCR or other AUXiliary source unit to these jacks.
- **PHONO input jacks**
  Connect the output jacks of the record player (turntable) to these jacks.

  Note:
  Make sure that you connect the white pin-plug to the white jacks (left); red pin-plug to the red jacks (right).

❻ AC power cord

Plug this AC power cord into an AC wall socket.

❼ Left speaker terminals

❽ Main power switch

Press the on side of this rocker (seesaw) switch to turn the power ON (standby position); press the OFF side to turn the power off.

NOTE:
Leave this main power switch ON at all times.

■ Speaker Connection

Before connecting

- Check the impedance of your speakers. Connect speaker with an impedance of 4 to 16 ohms.
  The amplifier's red speaker terminals are the ⊕ (positive) terminals and the black terminals are the ⊖ (negative) terminals.
- The ⊕ side of the speaker cable is marked to make it distinguishable from the ⊖ side of the cable. Connect this marked side to the red ⊕ terminal and the unmarked side to the black terminal.
- Prepare the speaker cords for connection by stripping off approximately 1 cm or less (no more as this could cause a short-circuit) of the outer insulation.

■ How to connect

(1) Twist the wires tightly together so that they are not straggly.
(2) Turn the terminal cap counterclockwise to loosen it.
  The speaker termianl caps cannot be fully removed from the base.
(3) Insert the wire into the terminal fully and turn the terminal cap clockwise to securely connect it.
(4) Make sure it is fastened firm by pulling the cord lightly.

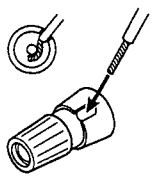

ENGLISH

Front Panel Controls and Their Functions

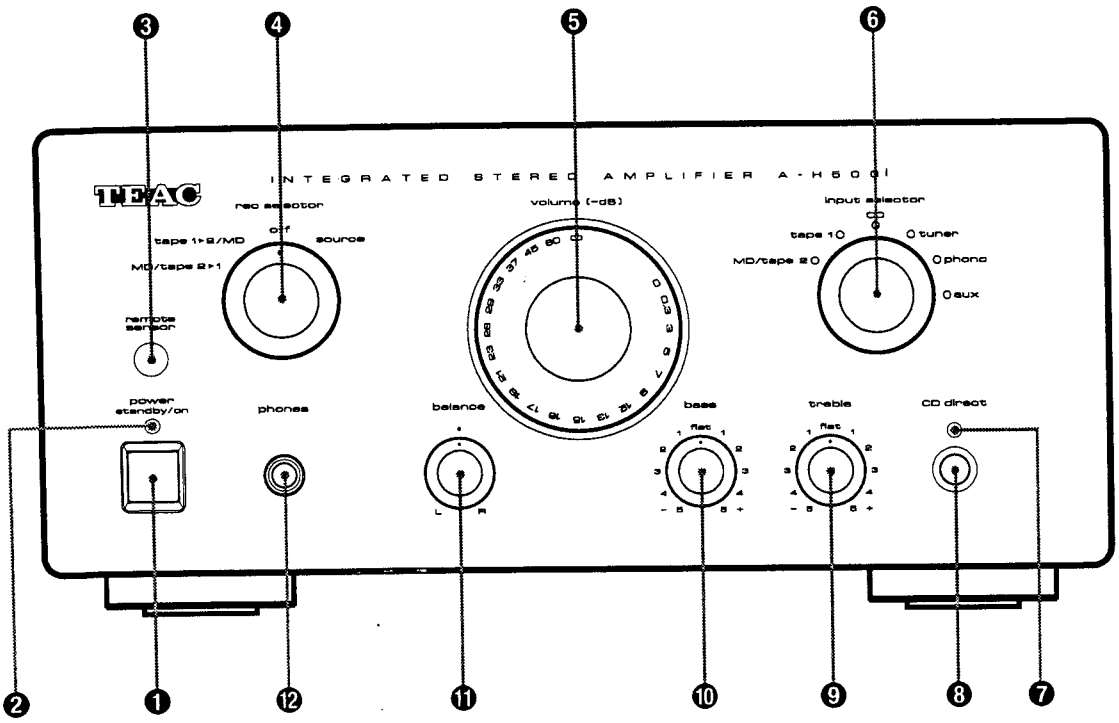

❶ Power standby/on button

When the main power switch on the side panel is ON:
Press this button to turn the power on, and the whole system connected by the remote control connection cables is turned on.
Press is again to turn the system off (power standby mode).

NOTE:
The system cannot be turned on when the main power switch on the side panel is OFF.

❷ Power standby indicator

This indicator lights up in the power standby mode and goes out when this unit is turned on.

❸ Remote control signal sensor

This sensor receives the signal from the remote control transmitter.

❹ Record selector

Set this selector to the appropriate position before beginning recording.

source:
Set the selector to this position to record the radio broadcast, CD, record or auxiliary source.

off:
Set to this position when you do not record.

tape 1►2/MD:
Set to this position to record from the cassette deck 1 to 2 or MD recorder.

MD/tape 2►1:
Set to this position to record from the MD player or cassette deck 2 to 1.

❺ Volume control

This control is used for adjusting the signal output level to the speakers.

❻ Input selector

Rotate this selector to select the desired input source.

MD/tape 2:
For listening to the sound from the unit connected to the MD/TAPE 2 jacks on the rear panel.
tape 1:
For listening to tape.
CD:
For listening to CD.
tuner:
For listening to radio broadcast.
phono:
For listening to record.
aux:
For listening to the sound from the unit connected to the AUX jacks on the rear panel.

❼ CD direct indicator

This indicator will light up when the CD direct function is engaged.

❽ CD direct button

Press this button for the pure sound when you listen to the CD, and then the tone and balance controls are bypassed.
Press it again to resume the controls.

Note:
When the CD direct function is engaged, no signal is output to the TAPE REC outputs. Therefore, when recording, set the CD direct button to OFF (the indicator above the button is unlit).

❾ Treble control

This control is used for adjusting the level of the high frequency sound range.

❿ Bass control

This control is used for adjusting the level of the low frequency sound range.

⓫ Balance control

This control is used for adjusting the balance of the volume level between the left and right channels.

⓬ Headphones jack (phones)

Connect the headphones plug to this jack for listening through headphones.
Sound from the speakers will not be heard when headphones are connected to this jack.

Note:
Decrease the volume level to minimum (∞position) before connecting headphones.

Basic Operation

1 **Set the volume control to ∞ position before beginning.**

2 **POWER**
Turn the system on by pressing the power button.

3 **Select the source you want to listen to by rotating the input selector knob.**

4 **Operate the source unit to be played.**
(Refer to the operating instructions of each unit.)

5 **Adjust the volume level.**

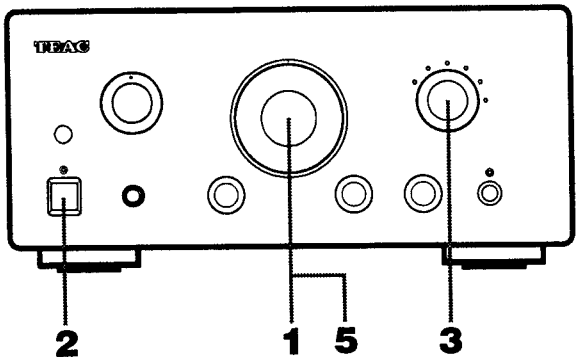

ENGLISH

Recording

1 **Set the rec selector to source.**

2 **Select a source to be recorded using the input selector.**

3 **Play the source.**

4 **Set the tape deck to the recording mode.**

- Recording is possible using both tape 1 and tape 2 decks.

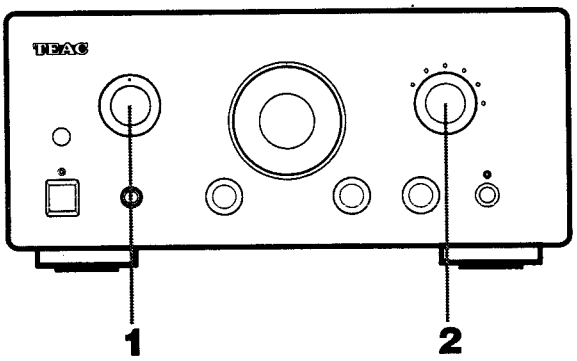

■ Dubbing (Recording from tape 1 to MD/tape 2 or vice versa)

1. **Set the rec selector to tape 1 > 2/MD (or MD/tape 2 > 1).**
2. **Play tape 1 (or MD/tape 2) deck.**
3. **Set MD/tape 2 (or tape 1) to the recording mode.**

Notes:

- When dubbing is attempted using two R-H500s, be sure not to connect the remote cable to the tape 2 deck. If it is connected, dubbing is not possible.
- When a second deck such as another R-H500 is connected to the MD/TAPE 2 REC terminal on the amplifier, dubbing from deck 1 to deck 2 is possible. However, remote-controlled operation of deck 2 is not possible. Therefore, do not connect the remote cable from deck 1 to deck 2.
- When dubbing from deck 1 to deck 2 (or MD recorder), set the rec selector on the amplifier to tape 1 > 2/MD, then start deck 2 (or MD recorder) for recording and press the play button of deck 1.

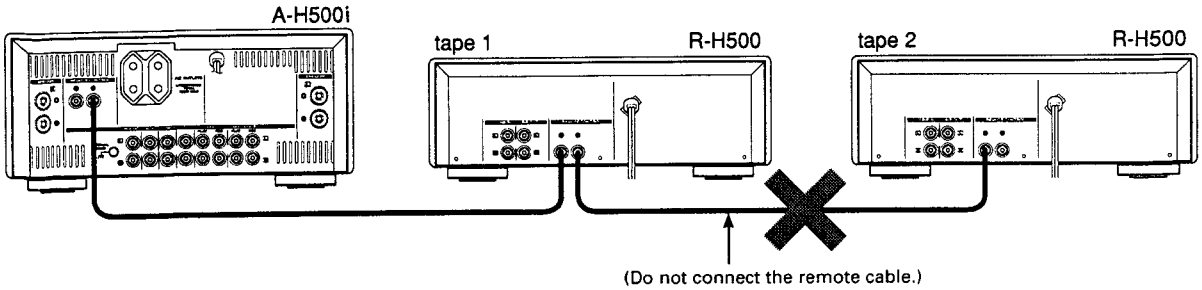

Remote Control Operation

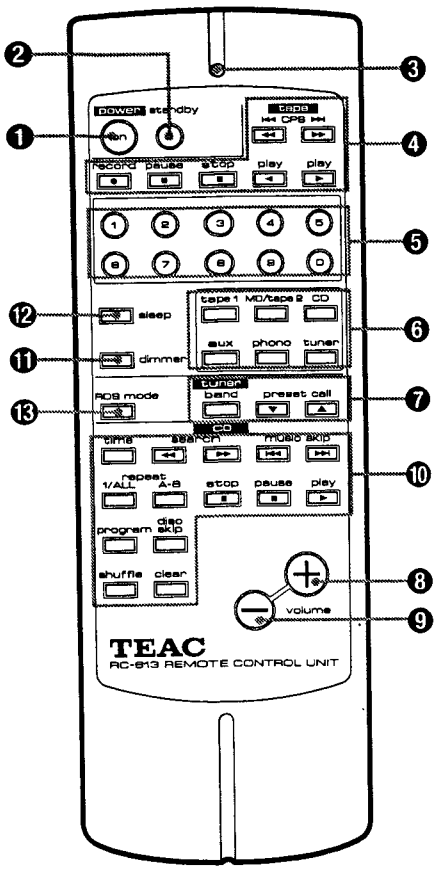

■How to load the batteries (Optional)

1. Slide the battery compartment cover in the direction of the arrow and remove it.
2. Load two "AAA" (R03, UM-4) dry batteries according to the polarity guides on the remote control unit.
3. Replace the battery compartment cover.

For the batteries

- When you do not plan to use the remote control for a long period of time, remove the batteries.
- Read the cautions printed on the batteries before inserting them.
- When replacing the batteries, replace them all at the same time. Do not mix old batteries with new ones.

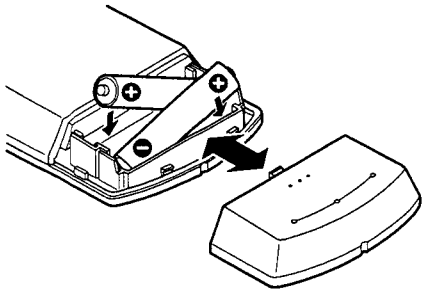

❶power on button
Press to turn the system on.

❷Power [standby] button
Press to turn the system off.

❸Indicator
This indicator will blink when the remote control signal is transmitted by pressing the button.

Note:
The indicator has two colors:
One is green in the CD mode; the other is red in other mode.

❹Cassette deck operation buttons

❺Numeric buttons
These buttons are used for selecting the preset channel in the tuner mode, or the track number in the CD mode.

- Using the input selector buttons, select CD or tuner before operating the numeric buttons.

When entering a single-digit number, enter 0 for 10's digit followed by the desired 1's digit.
When entering a double-digit number, first enter 10's digit then 1's digit.

Example) To enter 15:
(1) Press "1", and "1" starts blinking.
(2) While it is blinking, press "5".

❻Input selector buttons

❼Tuner buttons
band:
Selects between FM and AM broadcasts.
preset call:
Allows you to tune to preset channels in sequence.

❽Volume up button (+)

❾Volume down button (-)

❿CD Player operation buttons

⓫dimmer button
Press this button when you want to darken the FL displays on the tuner, CD player and cassette deck.
Press it again to resume the original brightness.

⓬sleep button
This button is used for engaging the sleep timer in the tuner.

⓭RDS (Radio Data System) mode button

The provided Remote Control Unit allows the unit to be operated from a distance.
When operating the remote control unit, point it towards the remote sensor on the front panel of the unit.

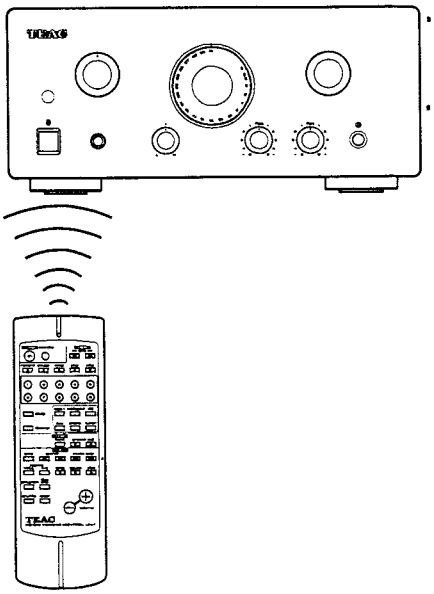

- Even if the remote control unit is operated within the effective range, remote control operation may be impossible if there are any obstacles between the unit and the remote control.
- If the remote control unit is operated near other appliances which generate infrared rays, or if other remote control devices using infrared rays are used near the unit, the unit may operate incorrectly. In the reverse way, the other appliances may operate incorrectly.

AI Direct Play Function

1. When you turn on the system, the source unit that has been selected by the input selector will start playing automatically.
   This AI direct play function allows you to restart operation using the source unit (tape deck, CD player or tuner) when power was last turned off.

   For example:
   (1) When the system is switched off with the input selector set to the CD position and a disc loaded on the CD player. → (2) Next time you switch the power on, → (3) the CD player will start playing automatically from the first track on the disc.

2. When you select the desired source by rotating the input selector, the selected source unit will start playing automatically.

   For example:
   (1) While you are listening to CD → (2) If you select tape 1, → (3) tape 1 will start playing and the CD player will pause automatically.

3. When you play a source unit by pressing the play button, that source will be selected automatically in the input selector.

   For example:
   (1) While you are listening to CD → (2) If you press the play button (◄ or ►) on the cassette deck (tape 1, R-H500), → (3) the input source will be changed to tape 1 automatically.

Note:
The following buttons work as play button in the tuner (T-H500): power button, band button, preset call up/down button, numeric buttons (1 - 0).

Specifications

Power Output:
50 W + 50 W (8 Ω, 1 kHz, 0.1%)
Total Harmonic Distortion:
0.03% (1 kHz, 8 Ω, 45 W)
S/N (Input Shorted):
Phono : 67 dB (IHF-A)
Aux, CD, Tape, Tuner : 95 dB (IHF-A)
CD direct : 100 dB (IHF-A)
Input Sensitivity/Impedance:
Phono : 2.8 mV/10 kΩ
Aux, CD, Tape, Tuner : 180 mV/10 kΩ
Input Overload:
Phono : 130 mV
Aux, CD : 9V
Frequency Response : 5 Hz - 80 kHz
Tone Control:
Bass : ±10 dB (100 Hz)
Treble : ±10 dB (10 kHz)
Channel Separation (Input Shorted):
65 dB (1 kHz)
Power Requirement : 230V, 50Hz
Power Consumption: 360W
Dimensions(W x H x D): 285 x 131 x 329 mm
Weight (Net): 6.9kg
Standard Accessory:
Remote Control Transmitter
(Batteries are not included)

- Improvements may result in specification or feature changes without notice.
- Photos and illustrations may differ slightly from production models.

ENGLISH

Troubleshooting

Before calling for service, check through the chart below for probable causes of the problems you experience while using this unit.

Problem	Probable cause(s)	Suggested remedy
No power.	The main power switch on the side panel is OFF.	Set the manual power switch to the ON position.
No sound.	The volume control is set to ∞ position.	Set the volume control to the appropriate position.
	The input selector has been set incorrectly.	Select the correct source that you wish to listen to.
	Connections are not complete or not correct to the speaker systems, etc.	Check the connections.
Sound stops during playing, or no sound after the power is turned on, and then the power standby indicator is blinking.	The protection circuitry has functioned because the (+) and (-) speaker connection wires are short-circuited or the output is overloaded.	● Turn the power off as soon as possible, and then check the speaker connection wires and remove the causes. ● Use the speaker systems of the proper impedance rating or operate the system at lower volume level.
Bass or stereo sound is not reproduced fully.	Speaker system connections are not correct.	Check the polarity of the connections.
Bass, treble and balance controls not effective.	The CD direct function is engaged.	Resume the tone and balance controls by pressing the CD direct button again.
Recording cannot be performed.	The rec selector is not set to the appropriate position.	Set the rec selector to the proper position.
	The CD direct function is engaged.	Press the CD direct button.
When listening to the stereo sound, the left and right sounds are reversed.	The left and right speaker connections or source connections are reversed.	Check all the connections and correct them if necessary.
A low-pitched noise (hum or buzz) is heard.	The power cord or a fluorescent light, etc., is near the connection wires.	Try to separate this unit as far as possible from the electric appliance.
Sound is not heard from one of the speaker systems.	The speaker wires are disconnected.	Check and correct the speaker wire connections.
	The balance control is set too far to one side.	Set the balance control so that sounds are heard at the center between the speaker systems.

AI Direct Play Function

1. When you turn on the system, the source unit that has been selected by the input selector will start playing automatically.
   This AI direct play function allows you to restart operation using the source unit (tape deck, CD player or tuner) when power was last turned off.

   For example:
   (1) When the system is switched off with the input selector set to the CD position and a disc loaded on the CD player. → (2) Next time you switch the power on, → (3) the CD player will start playing automatically from the first track on the disc.

2. When you select the desired source by rotating the input selector, the selected source unit will start playing automatically.

   For example:
   (1) While you are listening to CD → (2) If you select tape 1, → (3) tape 1 will start playing and the CD player will pause automatically.

3. When you play a source unit by pressing the play button, that source will be selected automatically in the input selector.

   For example:
   (1) While you are listening to CD → (2) If you press the play button (◄ or ►) on the cassette deck (tape 1, R-H500), → (3) the input source will be changed to tape 1 automatically.

Note:
The following buttons work as play button in the tuner (T-H500): power button, band button, preset call up/down button, numeric buttons (1 - 0).

Specifications

Power Output:
50 W + 50 W (8 Ω, 1 kHz, 0.1%)
Total Harmonic Distortion:
0.03% (1 kHz, 8 Ω, 45 W)
S/N (Input Shorted):
Phono : 67 dB (IHF-A)
Aux, CD, Tape, Tuner : 95 dB (IHF-A)
CD direct : 100 dB (IHF-A)
Input Sensitivity/Impedance:
Phono : 2.8 mV/10 kΩ
Aux, CD, Tape, Tuner : 180 mV/10 kΩ
Input Overload:
Phono : 130 mV
Aux, CD : 9V
Frequency Response: 5 Hz - 80 kHz
Tone Control:
Bass : ±10 dB (100 Hz)
Treble : ±10 dB (10 kHz)
Channel Separation (Input Shorted):
65 dB (1 kHz)
Power Requirement: 230V, 50Hz
Power Consumption: 360W
Dimensions(W x H x D): 285 x 131 x 329 mm
Weight (Net): 6.9kg
Standard Accessory:
Remote Control Transmitter
(Batteries are not included)

- Improvements may result in specification or feature changes without notice.
- Photos and illustrations may differ slightly from production models.

ENGLISH

Troubleshooting

Before calling for service, check through the chart below for probable causes of the problems you experience while using this unit.

Problem	Probable cause(s)	Suggested remedy
No power.	The main power switch on the side panel is OFF.	Set the manual power switch to the ON position.
No sound.	The volume control is set to ∞ position.	Set the volume control to the appropriate position.
	The input selector has been set incorrectly.	Select the correct source that you wish to listen to.
	Connections are not complete or not correct to the speaker systems, etc.	Check the connections.
Sound stops during playing, or no sound after the power is turned on, and then the power standby indicator is blinking.	The protection circuitry has functioned because the (+) and (-) speaker connection wires are short-circuited or the output is overloaded.	● Turn the power off as soon as possible, and then check the speaker connection wires and remove the causes. ● Use the speaker systems of the proper impedance rating or operate the system at lower volume level.
Bass or stereo sound is not reproduced fully.	Speaker system connections are not correct.	Check the polarity of the connections.
Bass, treble and balance controls not effective.	The CD direct function is engaged.	Resume the tone and balance controls by pressing the CD direct button again.
Recording cannot be performed.	The rec selector is not set to the appropriate position.	Set the rec selector to the proper position.
	The CD direct function is engaged.	Press the CD direct button.
When listening to the stereo sound, the left and right sounds are reversed.	The left and right speaker connections or source connections are reversed.	Check all the connections and correct them if necessary.
A low-pitched noise (hum or buzz) is heard.	The power cord or a fluorescent light, etc., is near the connection wires.	Try to separate this unit as far as possible from the electric appliance.
Sound is not heard from one of the speaker systems.	The speaker wires are disconnected.	Check and correct the speaker wire connections.
	The balance control is set too far to one side.	Set the balance control so that sounds are heard at the center between the speaker systems.

AI Direct Play Function

1. When you turn on the system, the source unit that has been selected by the input selector will start playing automatically.
   This AI direct play function allows you to restart operation using the source unit (tape deck, CD player or tuner) when power was last turned off.

   For example:
   (1) When the system is switched off with the input selector set to the CD position and a disc loaded on the CD player. → (2) Next time you switch the power on, → (3) the CD player will start playing automatically from the first track on the disc.

2. When you select the desired source by rotating the input selector, the selected source unit will start playing automatically.

   For example:
   (1) While you are listening to CD → (2) If you select tape 1, → (3) tape 1 will start playing and the CD player will pause automatically.

3. When you play a source unit by pressing the play button, that source will be selected automatically in the input selector.

   For example:
   (1) While you are listening to CD → (2) If you press the play button (◄ or ►) on the cassette deck (tape 1, R-H500), → (3) the input source will be changed to tape 1 automatically.

Note:
The following buttons work as play button in the tuner (T-H500): power button, band button, preset call up/down button, numeric buttons (1 - 0).

Specifications

Power Output :
50 W + 50 W (8 Ω, 1 kHz, 0.1%)
Total Harmonic Distortion :
0.03% (1 kHz, 8 Ω, 45 W)
S/N (Input Shorted) :
Phono : 67 dB (IHF-A)
Aux, CD, Tape, Tuner : 95 dB (IHF-A)
CD direct : 100 dB (IHF-A)
Input Sensitivity/Impedance :
Phono : 2.8 mV/10 kΩ
Aux, CD, Tape, Tuner : 180 mV/10 kΩ
Input Overload :
Phono : 130 mV
Aux, CD : 9V
Frequency Response : 5 Hz - 80 kHz
Tone Control :
Bass : ±10 dB (100 Hz)
Treble : ±10 dB (10 kHz)
Channel Separation (Input Shorted) :
65 dB (1 kHz)
Power Requirement : 230V, 50Hz
Power Consumption: 360W
Dimensions(W x H x D): 285 x 131 x 329 mm
Weight (Net): 6.9kg
Standard Accessory:
Remote Control Transmitter
(Batteries are not included)

- Improvements may result in specification or feature changes without notice.
- Photos and illustrations may differ slightly from production models.

ENGLISH

Troubleshooting

Before calling for service, check through the chart below for probable causes of the problems you experience while using this unit.

Problem	Probable cause(s)	Suggested remedy
No power.	The main power switch on the side panel is OFF.	Set the manual power switch to the ON position.
No sound.	The volume control is set to ∞ position.	Set the volume control to the appropriate position.
	The input selector has been set incorrectly.	Select the correct source that you wish to listen to.
	Connections are not complete or not correct to the speaker systems, etc.	Check the connections.
Sound stops during playing, or no sound after the power is turned on, and then the power standby indicator is blinking.	The protection circuitry has functioned because the (+) and (-) speaker connection wires are short-circuited or the output is overloaded.	● Turn the power off as soon as possible, and then check the speaker connection wires and remove the causes. ● Use the speaker systems of the proper impedance rating or operate the system at lower volume level.
Bass or stereo sound is not reproduced fully.	Speaker system connections are not correct.	Check the polarity of the connections.
Bass, treble and balance controls not effective.	The CD direct function is engaged.	Resume the tone and balance controls by pressing the CD direct button again.
Recording cannot be performed.	The rec selector is not set to the appropriate position.	Set the rec selector to the proper position.
	The CD direct function is engaged.	Press the CD direct button.
When listening to the stereo sound, the left and right sounds are reversed.	The left and right speaker connections or source connections are reversed.	Check all the connections and correct them if necessary.
A low-pitched noise (hum or buzz) is heard.	The power cord or a fluorescent light, etc., is near the connection wires.	Try to separate this unit as far as possible from the electric appliance.
Sound is not heard from one of the speaker systems.	The speaker wires are disconnected.	Check and correct the speaker wire connections.
	The balance control is set too far to one side.	Set the balance control so that sounds are heard at the center between the speaker systems.

For U.S.A.

TO THE USER

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against interference in a residential area. This device generates and uses radio frequency energy and if not installed and used in accordance with the instructions, it may cause interference to radio or TV reception. If this unit does cause interference with TV or radio reception you can try to correct the interference by one or more of the following measures:

a) Reorient or relocate the receiving antenna.
b) Increase the separation between the equipment and the receiver.
c) Plug the equipment into a different outlet so that it is not on the same circuit as the receiver.
If necessary, consult the dealer or an experienced radio/TV technician for additional suggestions.

CAUTION:
Changes or modifications to this equipment not expressly approved by TEAC CORPORATION for compliance could void the user's authority to operate this equipment.

For CANADA

THIS DIGITAL APPARATUS DOES NOT EXCEED THE CLASS B LIMITS FOR RADIO NOISE EMISSIONS FROM DIGITAL APPARATUS AS SET OUT IN THE RADIO INTERFERENCE REGULATIONS OF THE CANADIAN DEPARTMENT OF COMMUNICATIONS.

LE PRÉSENT APPAREIL NUMÉRIQUE N'ÉMET PAS DE BRUITS RADIOÉLECTRIQUES DÉPASSANT LES LIMITES APPLICABLES AUX APPAREILS NUMÉRIQUES DE CLASSE B PRÉSCRITES DANS LE RÉGLEMENT SUR LE BROUILLAGE RADIOÉLECTRIQUE ÉDICTÉ PAR LE MINISTÈRE DES COMMUNICATIONS DU CANADA.

For CANADA

AC POWER CORD CONNECTION

CAUTION:
TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

CORDE DE CONNEXION CA

ATTENTION:
POUR ÉVITER LES CHOCS ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND.